



* All-thread rods, level adjustment nuts, upper level adjustment washer by others.

1. Coordinate location of each isolator with project submittals.
2. Attach hanger box to upper all-thread rod which should already be attached to structure.
3. Align lower all-thread rod through center of hanger box bottom hole and attach to lower level adjustment nut.
4. Elevate equipment, duct or pipe and attach to lower all-thread rod. Be careful not to overload any one hanger.
5. If necessary, adjust level of equipment, duct or pipe with lower/upper level adjustment nuts.
6. Check to ensure adequate horizontal clearance between lower all-thread rod and bottom hole of hanger box.

Notes / Remarks :

VIBRATION MANAGEMENT CORPORATION

5930 THOMAS ROAD

Internet address:

HOUSTON - TEXAS 77041 , USA

www.vimco.biz

Project :
Client :
Consultant :
Representative:

Title :

**HSx, HNSx
Spring + Neospring Hanger
Installation Instructions**

Drawing no.

I-210001.01

Rev. 0