



* Figure shown is single spring isolator. Installation instructions remain the same for multiple spring isolators.

1. Coordinate location of each isolator with project submittals.
2. Raise equipment and place isolators under load points in equipment base. Lift evenly around equipment; do NOT raise equipment via one lifting point.
3. Lower equipment gradually on isolators.
4. Do NOT shift equipment laterally while it is supported on isolators.

Note: Isolator loading indicated in product submittals is applicable to loaded-area of pad only and NOT to full pad area. To ensure proper pad loading, equipment base width must be equal to or greater than mounting pad width. Alternatively weld a steel plate (of sufficient thickness/strength) of same sizes as pad underneath equipment base at load point.

<u>Notes / Remarks :</u>		VIBRATION MANAGEMENT CORPORATION 5930 THOMAS ROAD HOUSTON - TEXAS 77041 , USA Internet address: www.vimco.biz	
Project :		Title : CRMP, RMP, ECRMP, SRMP, 3RFP Mounting Pad Installation Instructions	<u>Drawing no.</u> I-220001.01
Client :			Rev. 0
Consultant :			
Representative:			